



# Two Stage Exhaust Filter

## DSV Series

### Industry Benefits

- Oil mist elimination
- Odor adsorption
- Reduce overall maintenance costs
- Contamination removal

### Features


- Coalescing element filters oil mist and most contaminants
- Activated carbon element removes offensive odors generated by the process
- Robust design
- Easy serviceability
- Convenient access drain port

### Technical Specifications

- 0.3 micron media; 99.97% efficiency
- Continuous operating temp: 32°F (0°C) to 113°F (45°C)
- 20 m<sup>3</sup>/hour flow rating
- Maximum back pressure 12 psig (1.8 bar absolute, 1.8 x 10<sup>5</sup> Pa)
- NW25 connection

### Additional Options

- Clamp, centering ring, and O-ring kit available
- Drain kits available upon request

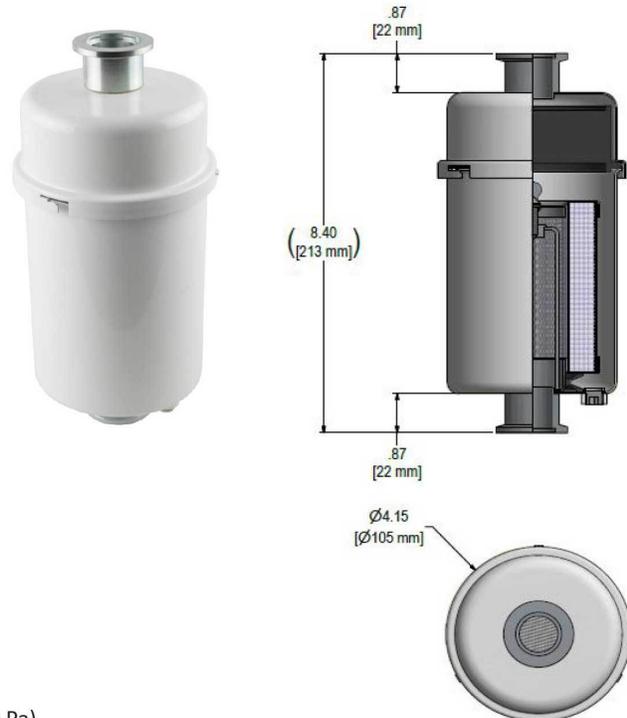

Part Number	Description	Approx. Wt. lbs.
DSV-PSG725/AC10-NW25	Two-stage exhaust filter	3
PSG725	Odor adsorbent element replacement	1
AC10	Coalescing element replacement	1

Rev: DSV-1806K

sales@intlvac.ca  
1.800.959.5517

order online at:  
www.intlvac.ca